



ADVANCED SYSTEMS, INC.
3550 Covington Pike, Suite #105
Memphis, TN 38128

(901) 454-4864
(901) 255-7255 Fax
TN Alarm Cert #C0349

CHANGING USER CODES

Step 1 Your system must be in the Disarmed state to change user codes.

Step 2 Press [Ⓜ]-[5].

Step 3 Enter a "Master Arm/Disarm Code".

NOTE: For partitioned systems, someone changing the code of another person must have access to all or more partitions than the user being changed.

Step 4 The ready light will flash.

Step 5 Enter the 3-digit "user number". You must always enter 3 digits, such as [0] - [0] - [3] for user 3, or [1] - [5] - [2] for user 152.

Step 6 Enter the new four (4) or six (6) digit "user code".

NOTE: To delete a user code, enter * * * * for a 4-digit code, or * * * * * for a 6-digit code.

Step 7 The ready light will flash indicating you are back at Step 4 above. If the code is rejected, the sounder will beep 3 times.

Step 8 If another "user code" needs to be programmed, return to Step 5.

Step 9 Press the [#] key while the ready light is flashing to exit the User Code Programming Mode.