



ADVANCED SYSTEMS, INC.
3550 Covington Pike, Suite #105
Memphis, TN 38128

(901) 454-4864
(901) 255-7255 Fax
TN Alarm Cert #C0349

BYPASSING ZONES

If you wish to bypass one or more zones, this must be done while the system is in the disarmed state. The following steps are used for bypassing zones:

- Step 1 Press the [BYPASS] key.
- Step 2 Enter user code if required (optional). The bypass light flashes.
- Step 3 Enter the digits indicating the zone you wish to bypass. (Example: Press the [1] key for zone 1, press [1] - [0] - [6] for zone 106.)
- Step 4 Press the [BYPASS] key again.
- Step 5 The corresponding zone light will illuminate indicating the zone has been bypassed. Repeat steps 3 and 4 for any other zone(s) that need to be bypassed.
- Step 6 Press the [BYPASS] key again -or- press the [#] key to exit the Bypass Mode. The bypass light will stop flashing upon exiting the Bypass Mode.

GROUP BYPASS

By pressing the [BYPASS] key, followed by the [0] key, then the [BYPASS] key again, all zones that are designated as group bypass zones will be bypassed. Press the [BYPASS] key again to exit group bypassing.

UNBYPASSING

To manually unbyypass zones, perform the bypassing procedure on a zone that is already bypassed. The corresponding light for that zone will go off when unbyypassed.

NOTE: All zones will automatically be unbyypassed each time the system is disarmed.